
 
 
 




 


Wiring diagram




 

Color of wire	Red	Black	Orange	Blue
Function	Positive electrode of accumulator	Ground wire	Electric lock comes out positive electricity	Starting wire
Color of wire	Pink	Yellow	Yellow	Gray
Function	Flameout wire beside lock	Wire of direction lamp	Wire of direction lamp	Flameout wire of motorcycle



## FUNCTIONS:

Function button	State	Function	Operation	Instruction
 Setting button	Normal	First class guard	Press once (  )	The alarm sounds 2 beeps, the turning lights flash 2 times, the device set into alarm condition after 3 seconds. 1. Being touched off at first time, the alarm sounds 5 beeps with flashing of turning lights. 2. Being touched off within 5 seconds again, the alarm sounds 10 seconds with flashing of turning lights, the active start circuit will be cut off in the same time.
		Second class guard	Press twice (  )	The alarm sounds 1 beeps, the turning lights flash 1 times, the device set into alarm condition after 3 seconds. 1. Being touched off at first time, the alarm sounds 5 beeps with flashing of turning lights. 2. Being touched off within 5 seconds again, the alarm sounds 15 seconds with flashing of turning lights, the active start circuit will be cut off in the same time.
	Guard	Emergency alarm	Press once (  )	While in alarm condition the alarm will be activated with turning lights flashing uninterruptedly if someone attempts to start the motor using a key, and the active start circuit will be cut off at the same time. The alarm can be ceased only by turning the key to OFF or pressing (  )
	Driving	Anti-hijacking protection	Press once (  )	The motorcycle will be stopped within 1 second, the alarm sounds uninterruptedly with flashing of turn lights, the active start circuit will be cut off in the same time.
 Starting button	Normal or guard	Remote start	Press twice (  )	Press twice (  ) within 1 second, the motorcycle will be started automatically. If too cold or idle speed is too low to start, repeat operation above.



 Releasing button	Guard	Release safe-guard	Press once (  )	The alarm sounds 2 beeps, the turning lights flash 2 times, the device will be released at all.
	Alarm	Release alarm	Press once (  )	The alarm sounds 2 beeps, the turning lights flash 2 times, the device will be released at all.
	Driving	Remote stop	Press once (  )	The active start circuit will be cut off and the motorcycle will be stop immediately.
	Normal	Adjust sensitivity	Keep Pressing (  ) 5 seconds	The alarm sounds 1 beeps is the first level, the highest level. The alarm sounds 2 beeps is the second level. The alarm sounds 3 beeps is the third level, the lowest level.

## Using tips:

1. The "start" button can not be pressed when remote start was adopted, otherwise the fuse will be burnt.
2. Motorcycle is not immobilized by switch of lock after starting by remote controller.
3. The engine can not be started remotely if the brake light was broken. The brake light must be renewed.
4. The device must be earthed while equipped and tested alarm system in the motorcycle.
5. Don't fall remote controller heavy or immerge water, Keep away from high temperature environment.
6. Renew batteries if the distance of remote controller remotely short or indicator light of remote controller will be dark.